





Hibernation function

Handle put soldering iron holder,
automatic induction hibernation.



Set temperature

During sleep or heating,the knob rotates
clockwise and the temperature increases
upward.Turning the knob against the clock
decrease the temperature downward.



Temperature compensation

press and hold to enter the temperature compensation function.

If the actual measured temperature is 10 °C **higher** than the actual temperature, the knob is adjusted to -10 by turning counter-clockwise.



If the measured temperature is 10 °C **lower** than the actual temperature, the knob is turned clockwise and adjusted to 10.





3 storage temperature channels



Press and hold the knob, then turn on the power, both into the Celsius and Fahrenheit conversion.



